




The Tudor

From 16th century England, the Tudor design shows a characteristic arched opening, with two elegant rosettes on either side.

atelier
jouvence
 custom stoneworks

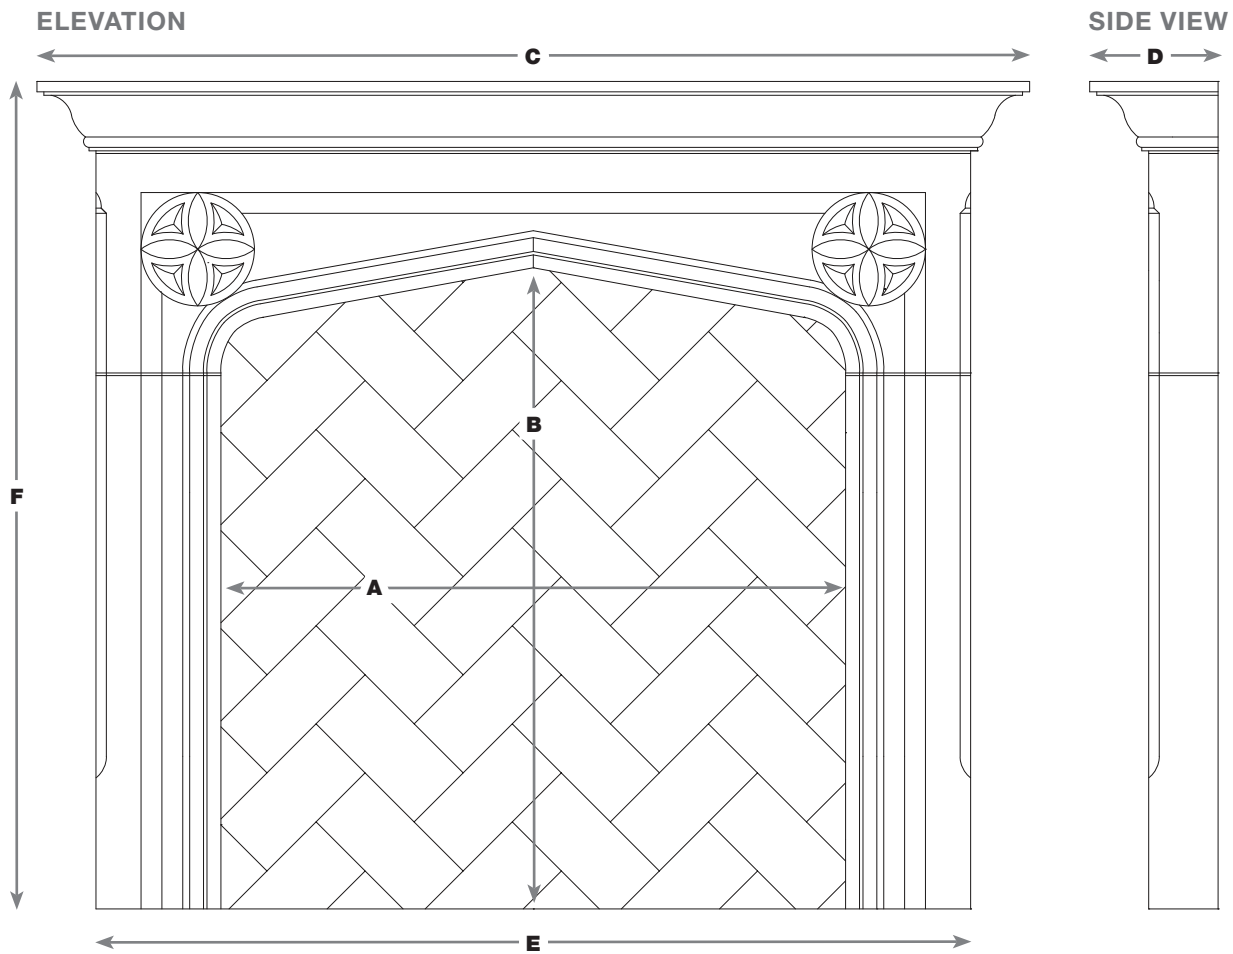

THE TUDOR SPECIFICATIONS

Fireplace Opening	A Opening Width	B Opening Height	C Shelf Width	D Shelf Depth	E Overall Width	F Overall Height
36" Opening	36"	36"	57 ¼"	8 ⅜ "	50 ½"	47 ¾"
42" Opening	42"	36"	63 ¼"	8 ⅜ "	56 ½"	47 ¾"
48" Opening	48"	36"	69 ¼"	8 ⅜ "	62 ½"	47 ¾"